AURATON 3021H RT 3021H

Auraton 3021 H / Auraton 3021 H RTH controller enables the user to lock the buttons against access by unauthorized persons (hotel mode).

To do this, enter the menu and select the settings of **SE lock**.

PROG + OK) 3 sek.

The display will show 5ξ message instead of temperature and four dashes instead of current time. The first dash flashes (editing mode) and if no value is entered within 10 seconds or \odot button is pressed without entering any value, then the controller will return to normal operation (lock function will be inactive - default setting).

If you use "+/-" knob (within 10 seconds) to change the value from 0 to 9, then you must confirm it by pressing within next 10 seconds. If this is not done, the controller will exit this mode (normal operation) and the setting procedure will have to be started again.



However, if you set the first digit within 10 seconds and confirm it with n button, then the controller will proceed to editing the next digit (the second). After the last fourth digit is set, you must press n button within 10 seconds and then the code will be saved. If you do not press n button, the value will not be saved (no lock) and the controller will return to normal operation. After setting the lock of buttons, the controller displays all the necessary information.

NOTE: the code may be set only once and it is stored by the controller until the RESET MASTER function is used.

After first pressing of any button, only the backlight is activated. With the hotel mode enabled, editing of programs is disabled, as well as setting the time, changing the operation mode ($\mbox{$\mbox{$$$$}$}\mbox{$\mbox{$$$}$}\mbox{$\mbox{$$$}$}\mbox{$\mbox{$$

Function of editing the temperature and duration (hotel mode active).

After confirming the setting with \bigcirc k button, you may proceed to edit the time for which the temperature set manually is valid (from 1 h to 24 h - on the right side). The duration time may be changed with "+/-" knob and confirmed with \bigcirc k button.

In manual mode, the display shows the temperature and its remaining time. After this time, the controller returns to normal operation (the program set). If you need to cancel this setting before its automatic completion, use PROCO button.



Turning off the hotel mode

When you press © button and hold it for 5 seconds, the display will show 5£ message instead of temperature and the time will be replaced by first blinking dash for editing.



Use "+/-" knob to select the code, after choosing each digit press (within 10 seconds) otherwise the controller will return to normal operation (the lock is active).

After entering the correct code, the controller starts normal operation (the lock is inactivated). Re-activating the lock is carried out by simultaneous pressing and holding for 5 seconds $\stackrel{\text{\tiny{PROG}}}{=}$ and $\stackrel{\text{\tiny{CC}}}{=}$ buttons. Activation of the lock is indicated by 5ξ , message which is shown for 3 seconds on the display.

NOTE: Activating the lock by pressing and cc is not possible when the lock code is not set.

CE www.auraton.pl

ver. 20190724